
McCULLOCH SERVICE BULLETIN #1001

SUBJECT Starter Base Assembly Procedure

MODEL 55 DATE 9-18-57

The Starter Base Assembly, part number 51648, which formerly included the base, part number 51649, the bearing, part number 103535, and the seal, part number 101611, no longer includes the seal. The seal has been eliminated from the assembly to prevent its lip from being damaged or distorted as the starter shaft is being installed.

When performing a service replacement with an earlier starter base assembly into which the seal has already been installed, the seal must be removed before assembling the starter shaft in the base. The seal should then be examined for damage and, if perfect, it may be slipped over the slightly oiled starter shaft and pressed back into place. If the seal has been damaged beyond reuse, or if the new starter base assembly, which does not include a seal, is used, a new seal may be ordered under its part number 101611.

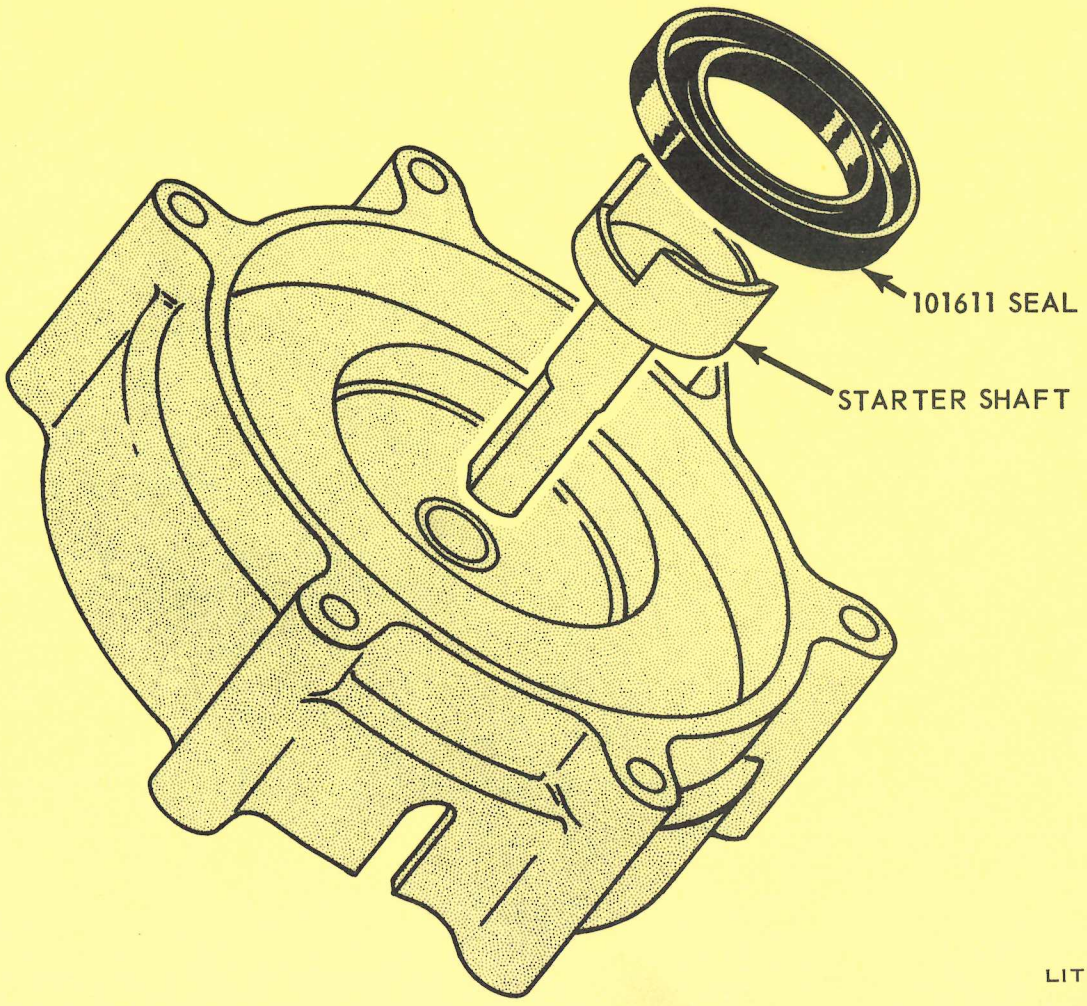

LITHO IN U.S.A.