
McCULLOCH

SERVICE BULLETIN #1033

SUBJECT TIGHTENING CYLINDER HEAD SCREWS


MODEL **S44A** and S55A DATE 10/30/58

When tightening cylinder head screws, use a torque wrench for accuracy and tighten the screws to 50 to 55 inch/pounds.

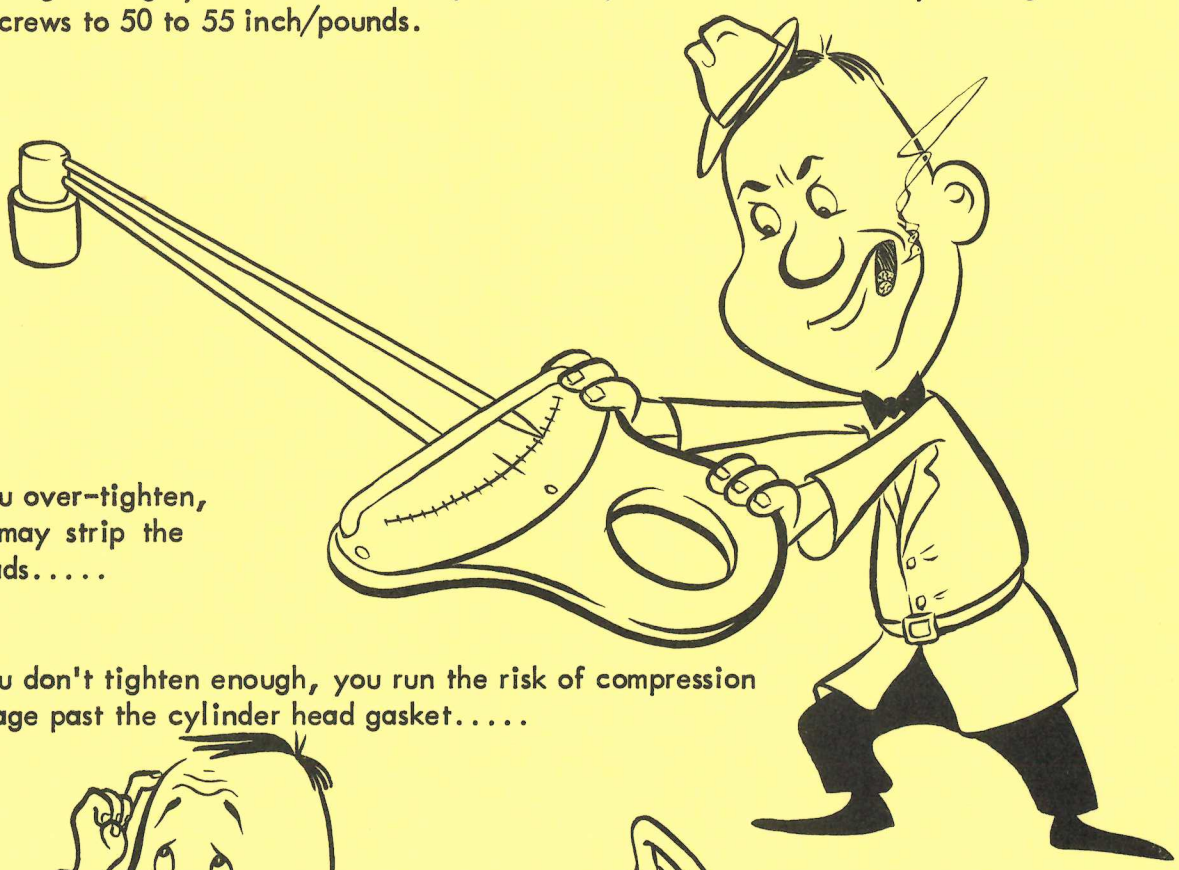

If you over-tighten, you may strip the threads.....

If you don't tighten enough, you run the risk of compression leakage past the cylinder head gasket.....

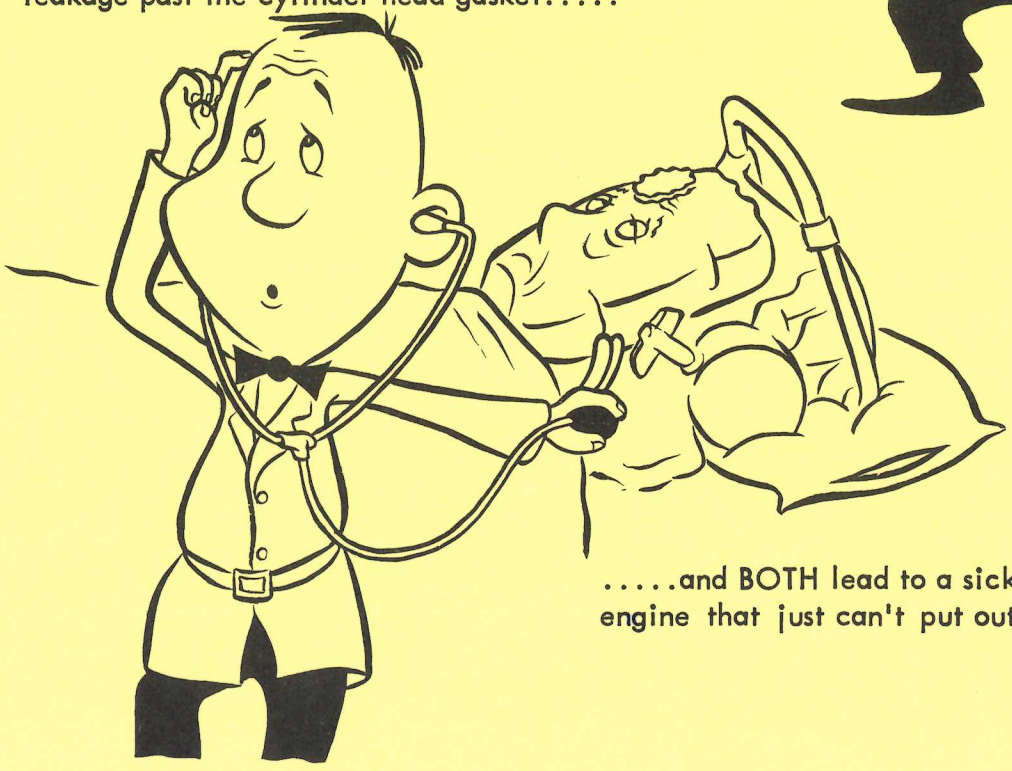

.....and BOTH lead to a sick, sick, SICK engine that just can't put out production!

© 1958 McCULLOCH CORPORATION

LITHO IN U.S.A.