McCULLOCH

SERVICE BULLETIN #1185

SUBJECT USE OF PROTECTOR PLATES, P/N 51632B

MODEL ALL

DATE 7/25/62

To make the installation of bar and chain easier, current model chain saws are being manufactured without Protector Plates, P/N 51632B. The protector plates will however, be available for addition to all chain saws for operators who prefer to use them.

In order to maintain correct starter shaft engagement with the clutch on Model 1-76 chain saws, a new Starter Assembly, P/N 53844, must be used to compensate for removal of the protector plates. The difference between the old Starter Assembly, P/N 57661, and the new Starter Assembly, P/N 53844, on the Model 1-76 is in the position of the Spacing Washer, P/N 104457, on the starter shaft.

The Model 1-76 saw may be used either with or without protector plates but the spacing washer must be in the proper position on the starter shaft. If protector plates are being removed from a saw, be sure that the spacing washer is moved to the position shown in Figure 1. This is the washer position in Starter Assembly, P/N 53844. Conversely, if the protector plates are being added to a saw previously without them, be sure that the washer is changed to the position shown in Figure 2. This is the washer position in Starter Assembly, P/N 57661.

To avoid starter troubles or severe damage due to improper position of spacing washer, observe the following rules:

A. When protector plates are not used, the washer is placed outside the drum at the end of the starter shaft as shown in Figure 1.

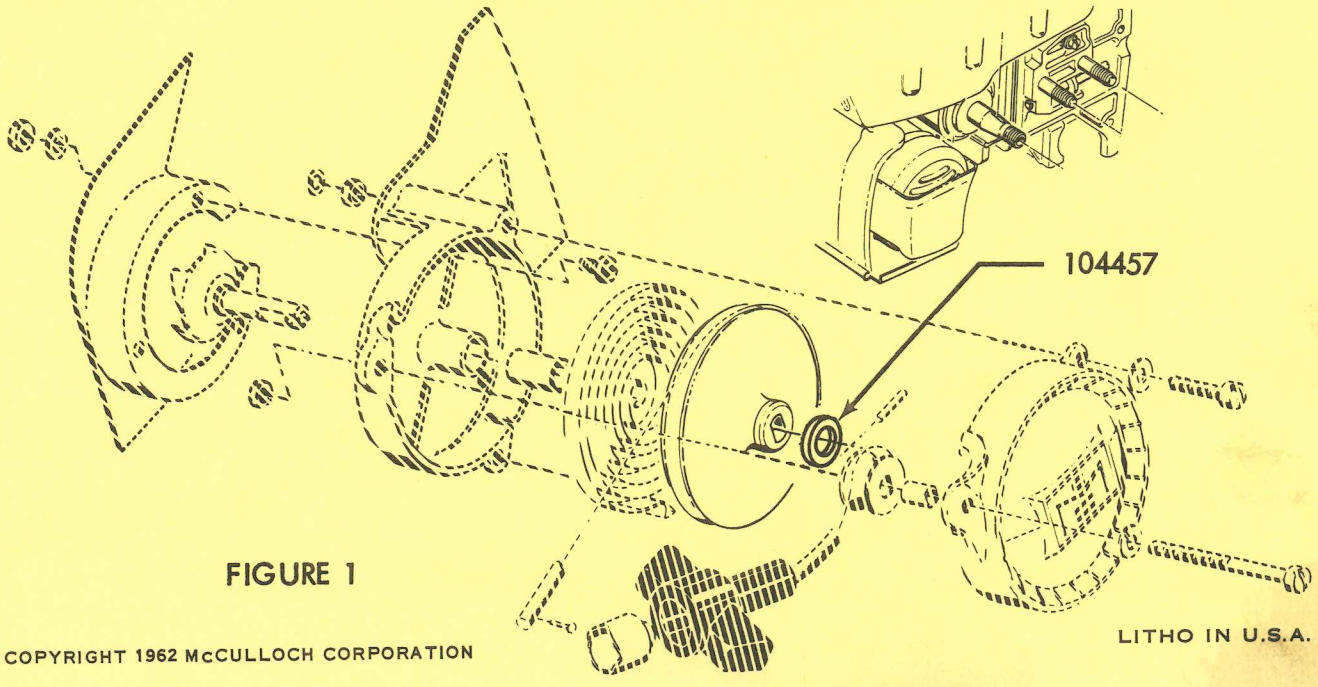


FIGURE 1

COPYRIGHT 1962 McCULLOCH CORPORATION

LITHO IN U.S.A.

B. When protector plates are used, the washer is placed on the starter shaft between the sawdust shield cover and the starter base assembly as shown in Figure 2.

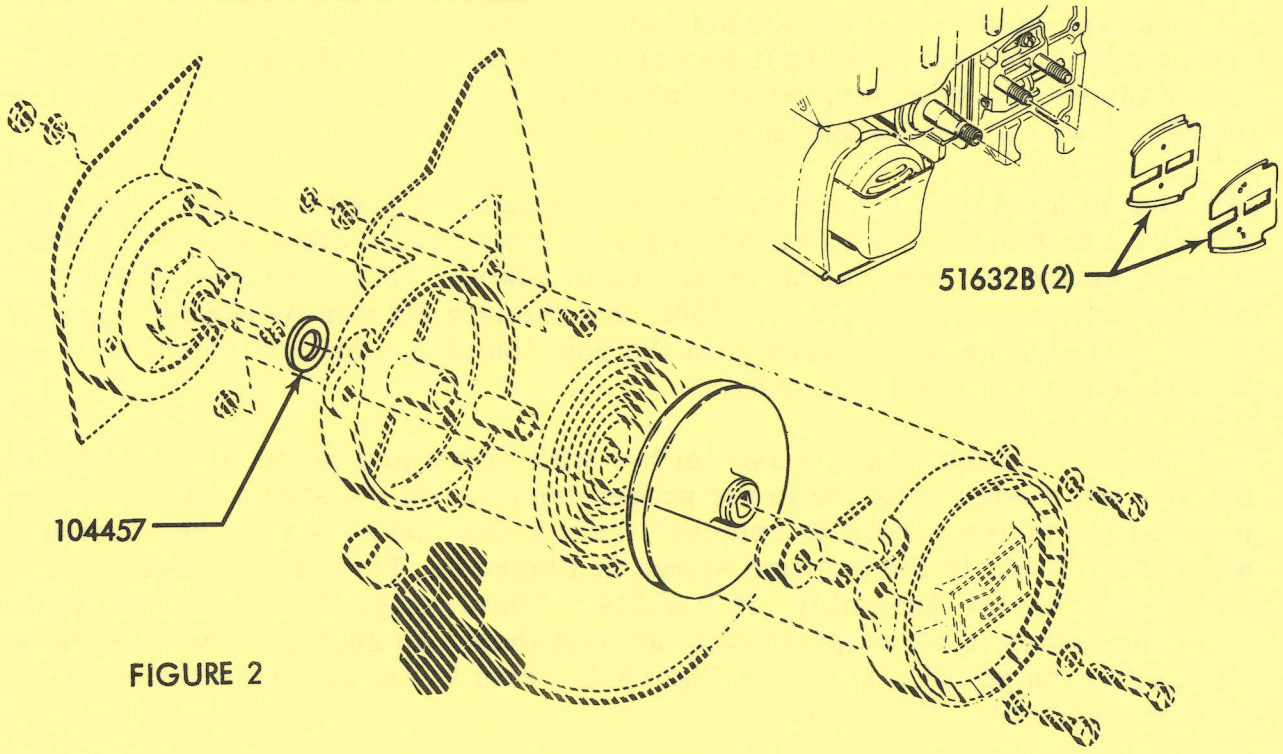


FIGURE 2