McCULLOCH

# SERVICE BULLETIN #1057


SUBJECT Fraying of Starter Rope By Anchor Rivet

MODEL **MAC 35**, MAC 35A, 35, 39, D44, S44, S55, S44A, S55A

DATE 5/21/59

To prevent fraying of the starter rope by the anchor rivet, P/N 103697, the following method of installing a new starter rope is recommended.

1. Heat-seal ends of the rope fibers to prevent unraveling.
2. Insert end of starter rope through the hole in starter drum.
3. Insert anchor rivet in starter rope approximately one-half inch from rope end.
4. Dip rope and rivet into "Seal-All" about one inch and allow to dry.
5. Place anchor rivet in position as shown in illustration with the rivet head facing towards the outer rim of the starter drum.

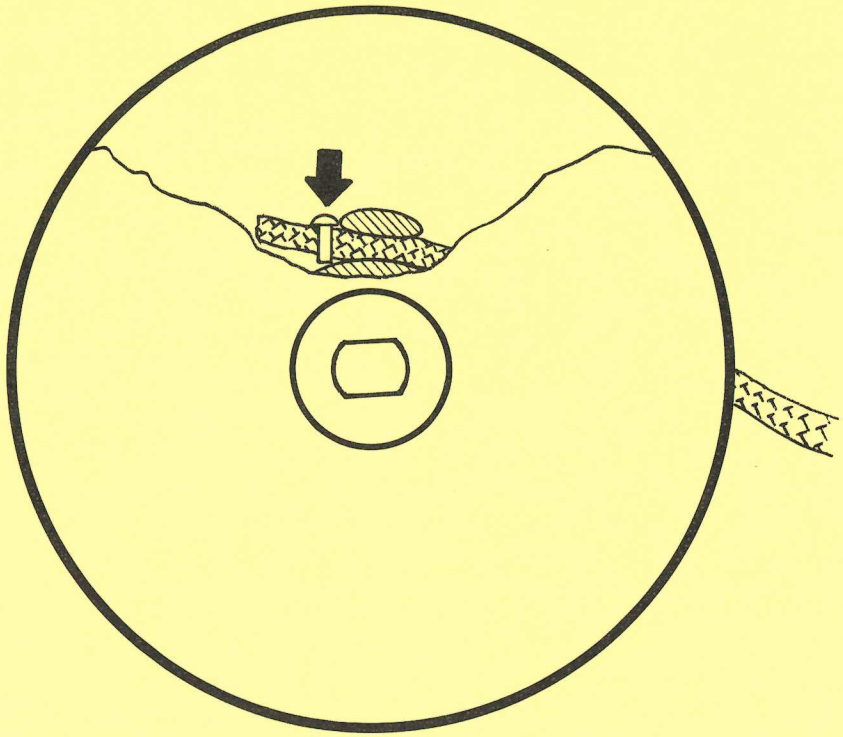

Note: See Service Bulletin #1007A for correct starter rope lengths.

COPYRIGHT— 1959 McCULLOCH CORPORATION

LITHO IN U.S.A.