McCULLOCH

SERVICE BULLETIN #1060


MODEL 1-70, 1-80 DATE 6/15/59

SUBJECT Removal & Installation Of Fuel Pickup Wick

Removal and installation of the Fuel Pickup Wick, P/N 55405, in the fuel tanks of 1-70 and 1-80 engines can be accomplished easily by following the procedures below:


To Remove the Wick:

1. Remove fuel cap and drain fuel tank.
2. Press down Spring, P/N 55436, with a screwdriver to release the upper end of spring from boss at top of fuel tank.
3. Remove Wick Clamp, P/N 55404, from bottom fuel tank with a long nose pliers. Withdraw fuel pickup wick. Use care and work it carefully from fuel tank.

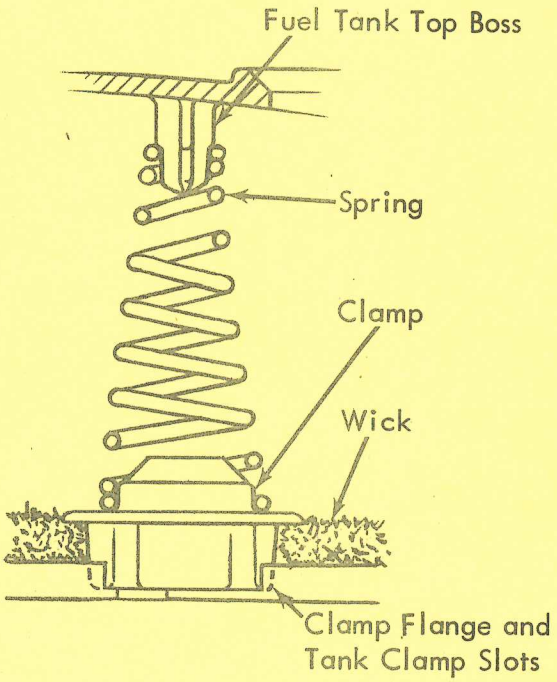

To Install the Wick:

1. Roll up wick. With top of wick up, begin at right or solid side of wick and roll toward left or split side. Make a tight roll so it can be inserted through fuel opening in top of fuel tank.
2. Insert rolled wick, front of wick first, into fuel tank. Unroll wick and position wick clamp slot directly over clamp slots in bottom of fuel tank.
3. Insert wick clamp with long nose pliers. Work front of wick clamp mounting flange into front clamp slot, then work rear into rear clamp slots, handle on top of clamp will run from seven to one o'clock.

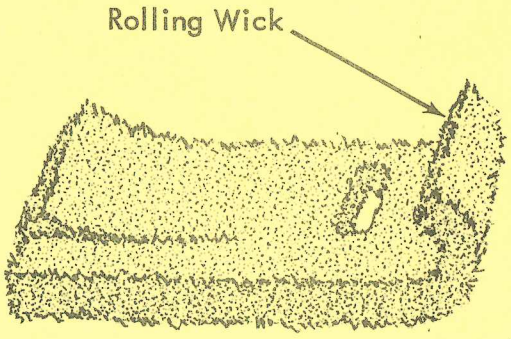

4. Insert spring into fuel tank with big end over wick clamp. Compress spring with long nose pliers until spring can seat over boss.

COPYRIGHT— 1959 McCULLOCH CORPORATION

LITHO IN U.S.A.